

## 240V Argonaut ENTRY LED Luminaire

### Installation & Maintenance Instruction Leaflet



**Victoria (Head Office & Manufacturing)**

**Website:**  
[www.clevertronics.com.au](http://www.clevertronics.com.au)  
**Email:**  
[info@clevertronics.com.au](mailto:info@clevertronics.com.au)  
**Phone:** +61 3 9559 2700  
**Fax:** +61 3 9559 2799

**New South Wales**  
**Phone:** +61 2 8805 6400  
**Fax:** +61 2 8805 6444

**Queensland**  
**Phone:** +61 7 3442 9700  
**Fax:** +61 7 3442 9777

**South Australia/Northern Territory**  
**Phone:** +61 8 8301 8800  
**Fax:** +61 8 8351 8286

**Western Australia**  
**Phone:** +61 8 9207 0000  
**Fax:** +61 8 9207 0088

**New Zealand**  
**Phone:** +64 800 548 448

**UK OFFICE**  
**Website:**  
[www.clevertronics.co.uk](http://www.clevertronics.co.uk)  
**Email:**  
[sales@clevertronics.co.uk](mailto:sales@clevertronics.co.uk)  
**Phone:** 01895 430 255



**Model:** ARGOENTRY

#### Spare Parts:

801-00016	Replacement LED Panel
133-00003	Replacement LED Driver


#### **Important:**

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Building and Electrical Standards.

## Installation:

The Argonaut ENTRY can be installed either Ceiling or Wall Mounted.

- Loosen the screw that is securing the mounting bracket in place. Slide product away from screw mount to remove it.
- Using the mounting bracket as a guide, mark the holes for mounting.
- Mount the base using appropriate fixings.
- Determine the best way to connect the flex from the product to Supply.
- Attach the metal Lanyard from the product to the Mounting bracket then proceed to suitably tighten the flex from the product to Supply.
- Attach the product to the bracket by slightly the sliding hooks on the product and the bracket. Tighten the screw to secure the product to bracket.
- Apply power to the fitting and test per the instructions.

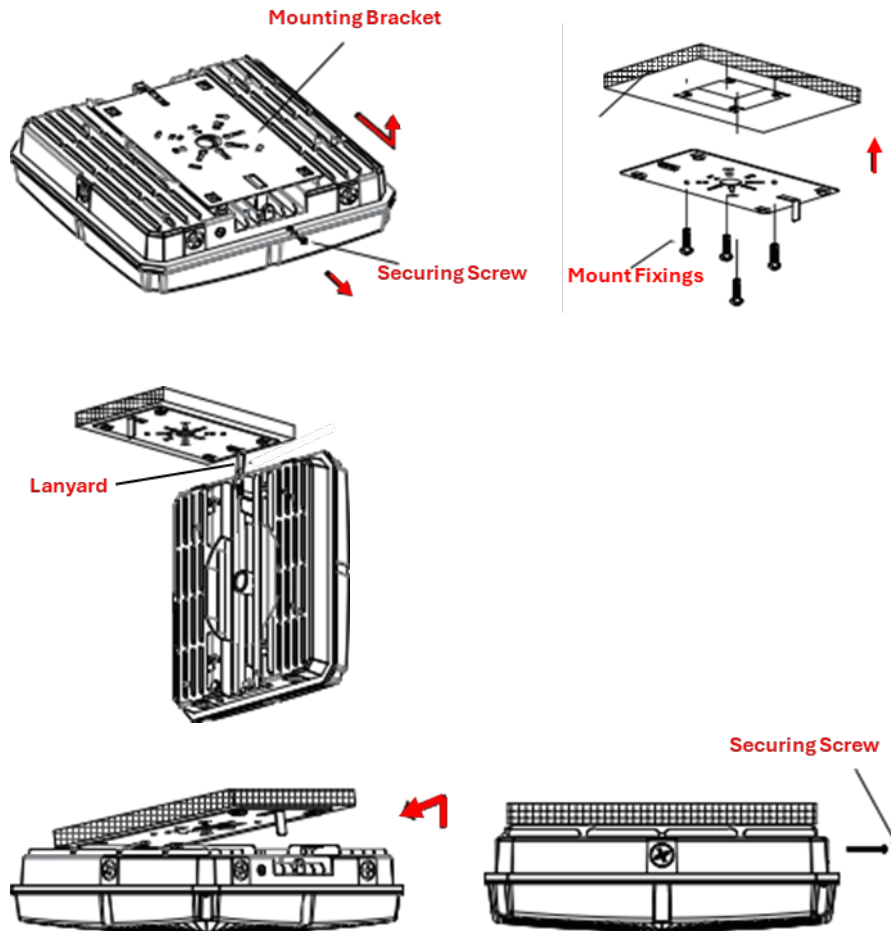

## Note:

This luminaire (with reinforced insulation between control/LED terminal and AC Supply) contains non-user replaceable light source – to be replaced (if required) by the manufacturer or his service agent or a similar qualified person.


If flexible wiring is connected to this luminaire and is within arms reach, the wiring shall be effectively fixed to the wall to reduce the risk of strangulation.

## Dimensions:



## Product Setting:

This product comes with configurable power and CCT. To adjust the settings unscrew the round conduit plug and adjust the switches to desired settings.

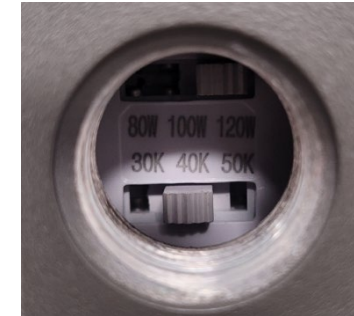

Available settings are Power: 80W (12600lm@4000K), 100W (15200lm@4000K), 120W (16900lm@4000K), and CCT: 3000K, 4000K, 5000K

## Trouble Shooting:

Below are a list of common problems and their possible causes.

**Fault:** The LED Strip is not illuminated.

**Check:** A.C. is connected and is turned on.

Wiring connections between the LED Driver & LED Strips

## Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website

<http://clevertronics.com.au/terms-conditions-sale-australia-nz/>

<https://clevertronics.co.uk/product-warranty-statement/>