# Clevertest and Clevertest Plus 🔆

Refer to the supplementary operation guide supplied with the Product.

After Power ON, the Status LED on a Clevertest Plus enabled fitting will display a rapid Green or Red flashing for a period up to 2 minutes.

Maintained fittings ((LWP2LIFE**M**-PRO-WPPOD-xx-yy)) cannot be scanned with a camera using the CleverSparky App as the maintained light source interferes with the camera scanning function. To register the fitting manually enter the serial number from the QR code and visually read the test result and enter manually into CleverSparky.

### **Zoneworks and DATA Monitored Options**

Lifelights with part numbers LWP2LIFE-PRO-WPPOD-ZW, LWP2LIFE-PRO-WPPOD-DATA are fitted with Zoneworks communications modules (nodes). These fittings are monitored using either Powerline Carrier Technology that utilising the power cable to provide data communication or a dedicated data cable to/from data router installed on a dedicated data trunk connected to a central Server (can also be connected via Ethernet/Internet/Fibre). Zoneworks software on the server is used to monitor, coordinate testing and collate test data from each Lifelight. Zoneworks Lifelights can be commissioned by a single push of the test switch, or scanning of the supplied barcode. The LED Test Switch indicator provides a multifunction indication of the status of the Lifelight during testing and normal operation:

State	LED Operation
Commissioned	LED on Solid (Green)
Un-commissioned	LED flashes at 0.5Hz (0.5s Green, 0.5s Yellow)
Emergency Light Test In Progress	LED flashes at 3s On (Yellow) & 0.5s Off

In the case of the DATA version a 2-way "figure 8" cable and terminal block facilitates the connection to the DATA network via a multi-drop bus (daisy chain connection). For further information of installation of a Zoneworks system, please refer to the Zoneworks Users Guide and Commissioning Guide (incl. DATA version)

# **DALI EM Option**

Lifelights with part numbers LWP2LIFE-PRO-WPPOD-DALI are fitted with DALI modules (nodes) that facilitate connection and integration to 3<sup>rd</sup> Party Lighting Control Systems. Before installing the LWP2LIFE-PRO-WPPOD-DALI please confirm that the Lighting Control System has the capability to monitor DALI Emergency Luminaires. The LWP2LIFE-PRO-WPPOD-DALI will be addressed and configured into the control system by the Lighting Control System Commissioning Technicians and not Clevertronics.

	**************************************		
	State	LED Operation	
	Commissioned/ Un-commissioned	LED on Solid (Green)	
	Emergency Light Test in progress	LED flashes at 1s On (Yellow) & 1s Off	
	"IDENTIFY COMMAND"	Fitting goes into emergency mode for 10 seconds	

A 2-way "figure 8" cable and terminal block facilitates the connection to the DALI network OR a 5/6way "structured wiring system" lead and plug facilitating the power and DALI connection. DALI connections are marked as Da Da.





Victoria (Head Office & Manufacturing)
Website: www.clevertronics.com.au
Email: info@clevertronics.com.au
Phone: +61 3 9559 2700

Fax: +61 3 9559 2799

Fax: +61 2 8805 6444

Phone: +61 2 8805 6400

Phone: +61 7 3442 9700 Fax: +61 7 3442 9777

Phone: +61 8 8301 8800

Phone: +61 8 9248 3720

Fax: +61 8 9248 3725

Fax: +61 8 8351 8286

Western Australia

New Zealand Phone: +64 800 548 448

South Australia/Northern Territory

**New South Wales** 

Queensland

# LWP2LIFE-PRO-WPPOD

# Surface Mount Twin Head Emergency Luminaire Installation & Maintenance Instruction Leaflet



Designed in Australia to comply with the requirements of AS2293.3: 2005 and AS/NZS CISPR15: 2011

NOTE: Standard product codes with this symbol are enabled with Clevertest Plus capability. Please refer to the operation guide supplied with the product for details.

# Models: LWP2LIFEz-PRO-WPPOD-xx-yy

xx = CT

Manual Test	xx = Blank	Sustained	z = Blank
Zoneworks	xx = ZW	Maintained	z = M
Z/W DATA	xx = DATA	Tamperproof	yy =TP
DALI Comp.	xx = DALI		

(NOTE: -CT Products supplied with the Clevertest Plus Symbol , are activated with Clevertest PLUS capability. Please refer to the operation guide supplied with the product for details).

# **Spare Parts:**

Testing:

Clevertest

1530050 Battery, 3.3 Volt 2.5Ah Li-ion (4)

2750356 LP/L10 WP POD, Gen2, 2 LED, Wht LED, Sub Assy

Options:

LLIFE-PRO-CKIT-NP LifelightPro,Control Only,Batten,L10, NP

# Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.

1942122 V1.4 3 March 2020

#### Installation:

#### Note: The fitting is designed to be installed as shown in the image below.


This LWP2LIFE-PRO-WPPOD Surface mount non-maintained Emergency Luminaire can be installed as either ceiling mount with the PODs facing down or on the wall with the PODs rotated to face down.

- · When wall mounting the fitting must be mounted 32mm off the wall to allow pods to rotate
- Locate the installation position.
- Pre-drill mounting holes per diagram below.
- Removed fitting cover.
- Use suitable fixings to fasten the fitting to the mounting surface.
- Taking note of the terminal block position, drill a hole in the fitting box to suit the cable gland or conduit to be used for power entry. Please ensure that the cable entry is appropriately sealed to maintain the IP65 rating.
- Terminate the supply cables to the L, N & E terminals (in the case of the –DALI or –DATA fittings terminate the DALI or DATA cable to the terminals marked Da Da or DATA).
- Ensure the Batteries and POD cables are connected.
- To rotate the PODs for the wall mount (WM) position loosen the internal locking nut, rotate and re-tighten the nut.
- Screw the cover to the base.

#### **Networking:**

When installing the product on a monitored network, (ZONEWORKS, DATA, DALI) simply insert the relevant Smart Node PCA.

## **Images and Dimensions:**

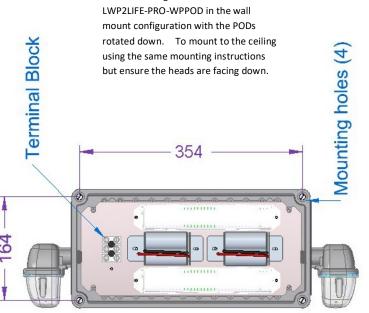

Note: The image below shows the

Note: When rotating the PODs in WM position ensure the PODs are level with the bottom of the main enclosure.

#### Testing:

When the LWP2PIFE-PRO-WPPOD unit is connected to the un-switched active, it must be allowed to charge the battery for at least 24 hours. The emergency lamp only illuminates during a power failure. Conduct the following tests:

- During the first commissioning test the emergency lamp must illuminate for at least 2 hours after
  disconnection from the main supply. The results of all tests are required to be recorded in a service
  logbook, which is to be kept on-site at all times. If the unit fails to illuminate for the requisite time,
  remedial action must be taken to repair the situation and once completed, the unit must pass a
  subsequent test.
- Press and hold Test Button in each POD or switch Off Mains Supply, check that the emergency lamp is On.
- Release the Test Button or Switch on Mains Supply, check that the emergency lamp is Off (Non-maintained operation).

#### Below are a list of common problems and their possible causes:

Fault: The Green LED indicator is not illuminated.

Check: A.C. is connected and is turned on.

Battery is connected. Test Switch for damage.

Fault: Lamp does not illuminate in emergency mode.

Check: A.C. is connected.

Lamp is correctly inserted. Battery is connected

Fault: Lamp illuminates in emergency mode, but only stays on for a short period.

Check: Battery has been allowed to charge for at least 24 hours.

Battery for damage.

# Rated Emergency Lumen Output in accordance with AS2293.1 (refer to spacing tables for installation positions):

Refer to the Technical Label for classification.

#### Caution:

On many building sites, power circuits may be cut off in an uncontrolled and repetitive basis during construction. As a result, any Lifelight Units, on these circuits, will have their batteries discharged or "cycled". The Li-ion battery in the Lifelight has been selected to give excellent long-life performance in a controlled IEC 60598-2-22 testing environment. Excessive battery cycling will reduce through-life performance and may lead to premature battery failure. Battery warranty claims, as a result of such abuse, are specifically EXCLUDED from Clevertronics warranty terms.

# Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website <a href="http://clevertronics.com.au/terms-conditions-sale-australia-nz/">http://clevertronics.com.au/terms-conditions-sale-australia-nz/</a>

1942122 V1.4 3 March 2020