

THIS PAGE IS INTENTIONALLY LEFT BLANK

Disc (Circular) LED Luminaire

Installation & Maintenance Instruction Leaflet



Victoria (Head Office & Manufacturing)

Website: www.clevertronics.com.au

Email: info@clevertronics.com.au

Phone: +61 3 9559 2700

Fax: +61 3 9559 2799

New South Wales

Phone: +61 2 8805 6400

Fax: +61 2 8805 6444

Queensland

Phone: +61 7 3442 9700

Fax: +61 7 3442 9777

South Australia/Northern Territory

Phone: +61 8 8301 8800

Fax: +61 8 8351 8286

Western Australia

Phone: +61 8 9207 0000

Fax: +61 8 9207 0088

New Zealand

Phone: +64 800 548 448

UK OFFICE

Website: www.clevertronics.co.uk

362 Stockley Close

West Drayton UB7 9BL

Phone: 01895 430 255



Models: FDISC-aa

Options:

DALI Driver

aa = DD

Spare Parts:

8002826 PCA: CLE 315mm 4000lm 840 ADV4 EM

1330053 LED Driver - LC 25W 350-1050mA flexC C EXC

Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Country Standards.

Installation:

The Disc Circular can be installed either Ceiling or Wall Mounted.

- Remove the diffuser from the base.
- Remove the gear-tray by loosening the 4 screws holding it in place and then slightly rotating the gear-tray anti-clockwise to release it from the keyhole slots.
- The power cable entry to the luminaire is via the rear surface of the base through the existing hole. Ensure appropriate cable entry provisions are made on the installation surface for this purpose.
- The base of the luminaire can be mounted to the installation surface with the use of suitable fasteners (Not provided). These fasteners should be placed through the mounting feet of the base of the luminaire. If the luminaire is to be wall mounted, ensure that the test switch and status LED is downward facing.
- Route the power cable into the base via the existing hole at the rear of the base during the installation of the base.
- Secure the gear-tray to the base by connecting the lanyard extending from the base to the gear-tray.
- Connect the 240VAC (⊕, L, N) supply to the terminal block of the gear tray.
- Secure the gear-tray to the base via the keyhole slots on the gear-tray and by tightening the 4 screws.
- Fit the diffuser to the base.

Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website

<http://clevertronics.com.au/terms-conditions-sale-australia-nz/>

<https://clevertronics.co.uk/product-warranty-statement/>

Dimensions/Installation:

Complete luminaire outer dimensions: **425mm (Diameter) x 116mm (Height)**
Base Diameter: **330mm**

