THIS PAGE IS INTENTIONALLY LEFT BLANK



Victoria (Head Office & Manufacturing) Website: www.clevertronics.com.au Email: info@clevertronics.com.au Phone: +61 3 9559 2700 Fax: +61 3 9559 2799

240V Argonaut PRO Weatherproof LED Batten **Installation & Maintenance Instruction Leaflet**





New South Wales Phone: +61 2 8805 6400

Fax: +61 2 8805 6444

Queensland

Phone: +61 7 3442 9700 Fax: +61 7 3442 9777

South Australia/Northern Territory

Phone: +61 8 8301 8800 Fax: +61 8 8351 8286

Western Australia

Phone: +61 8 9207 0000 Fax: +61 8 9207 0088

New Zealand

Phone: +64 800 548 448

UK OFFICE

Website: www.clevertronics.co.uk

362 Stockley Close West Drayton UB7 9BL Phone: 01895 430 255

Models: ARGOPRO-1200-xx-yy-zz

Options:

Microwave Sensor (HI/LO) xx = SEN**DALI** Driver xx = DDZW Inline Filter yy = FLT**Fused Terminal Block** yy = FTBFixed Lumen Output: 7200lm zz = 7200

(€ FR ®

Spare Parts:

8002755	PCA:LED Strip ARGOPRO-1200,HT10540-A1,16P16S,4000K	
1330055	LED Driver – Tridonic LC 50w 350-1050mA, 20-50V	
1330151	LED Driver - TCI DC MAXI JOLLY SVM 65 DALI SLIM	(SEN version only)
1330056	LED Driver – Tridonic LCA 50w 350-1050mA, one4all lp PRE	(DD version only)
8012110	Replacement Emergency LED Board	(-940 Version only)

Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Building and Electrical Standards.

Installation:

This product can be mounted/suspended from any solid surface. Follow the below installation steps:

- Determine the installation and power entry method.
- Undo the Diffuser Clips, remove the Diffuser and Gear Tray. Position the batten base in the desired location and Mark out the fixing points on the mounting surface.
- If the cable entry is to be via the rear of the body Drill out a suitable entry-hole in the rear of the
 batten body (must be suitably sealed after cable entry using a sealant). If the cable entry is via the
 end of the batten Install the provided cable gland, or bring in conduit, to the base as required for
 the intended power access.


Note: Only round cables are to be used with the cable gland for an IP65 seal. Keep cable entry straight and tension free. Ensure all seals are tight. min. wire diameter 7mm, max. 12mm.

- For surface mounting, there are 3 extrusions/posts at each end of the base. Drill out the desired number of fixing points at each end. Fixings must only be through the extrusions/mounting posts.
 - o Position the fitting to the mounting surface and mark the mounting holes.
 - Cable/Gland entry to be down if mounting vertically.
 - Drill the mounting holes.
 - Fix the base to the surface with appropriate fixings.
 - Seal any penetrations/fixing points with appropriate sealant.
- For Surface Mount Clip mounting, measure/mark spacing (see Dimensions image), install stainless steel clips to surface (use appropriate fixings), then insert batten into clips.
- For Suspension Mounting, measure/mark spacing (see Dimensions image), install suspension device, E.G chain, and connect chain to batten base.
- Wire mains power cable, 240V 50Hz, to terminals marked L, N & (and DALI Cable to terminals marked Da Da as applicable)
- Set Switch to the desired Lumen Output (3541lm | 4660lm | 5495lm | 6259lm, Default = 4660lm)
- Attach Gear Tray to lanyards.
- Reinstall the Gear Trav.
- Reinstall the Diffuser, latch the Diffuser using Diffuser Clips and secure with screws provided


NOTE:

 This luminaire (with reinforced insulation between control/LED terminal and AC Supply) contains non-user replaceable light source – to be replaced (if required) by the manufacturer or his service agent or a similar qualified person.

Dimensions:

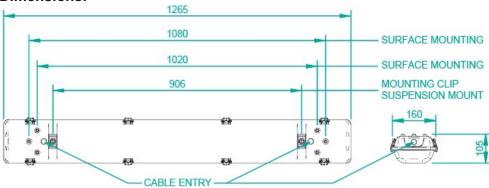

 Lumen Setting: (Not applicable to fixed lumen versions)



For -SEN products refer to the DIP Switches on the Driver.

	1	2	3	4	5
3541lm (500mA)	ON	ON	-	-	-
4660lm (650mA)	-	ON	ON	-	-
5495lm (750mA)	-	-	-	-	ON
6259lm (900mA)	ON	ON	-	-	ON

3541lm 4660lm 5495lm 6259lm

NOTE: Recommended currents are 500mA, 650mA, 750mA & 900mA for this product. Using settings outside of the recommended will void warranty. Product must be de-energised before switching Lumen/Current.

Trouble Shooting:

Below are a list of common problems and their possible causes.

Fault: The LED Strip is not illuminated. Check: A.C. is connected and is turned on.

Wiring connections between the LED Driver & LED Strips

Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website http://clevertronics.com.au/terms-conditions-sale-australia-nz/ https://clevertronics.co.uk/product-warranty-statement/