



L10 Supalite Weatherproof UPS Emergency Luminaire

Installation & Maintenance Instruction Leaflet



Victoria (Head Office & Manufacturing)

195 Chesterville Rd Moorabbin VIC 3189 Phone: +61 3 9559 2700 Fax: +61 3 9559 2799

News South Wales

Phone: +61 2 8805 6400 Fax: +61 2 8805 6444

Queensland

Phone: +61 7 3442 9700 Fax: +61 7 3442 9777

South Australia/Northern Territory

Phone: +61 8 8301 8800 Fax: +61 8 8351 8286

Western Australia

Phone: +61 8 9248 3720 Fax: +61 8 9248 3725

New Zealand - Safescape (NZ) Ltd

Phone: +64 9 482 1231 Fax: +64 9 482 1232

Designed in Australia - Manufactured in China to comply with the requirements of AS2293.3: 2005, AS/NZS CISPR15: 2009

Models:

LWFLEDM-UPS

Spare Parts:

1300047 LED Driver - LC 10w 500mA 1100550 WP Led Head, c/w Led's & Loom

Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.


1949322 V1.0 July 2017

Installation:

The L10 Weatherproof Supalite (LWFLED) is Wall Mounted. The LWFLED-UPS is housed in a weatherproof enclosure. The enclosure base is attached to the wall using screws installed through the 4 isolated holes. Once the base is mounted and wired the gear tray and cover are installed. Please follow the steps below to install the Weather Proof Exit:

- Remove the enclosure cover.
- Remove the gear tray.
- Determine power entry.
- Drill power access hole in the box base.
- Position the box base in the mounting position.
- Mark the 4 holes for mounting. Install the base using appropriate fixings (not supplied).
- Connect the UPS supply to the terminal block on the Gear Tray.
- · Reinstall the gear tray.
- Enable the UPS supply and check the fitting operation.
- Reinstall the enclosure cover.

Mounting Hole Dimensions

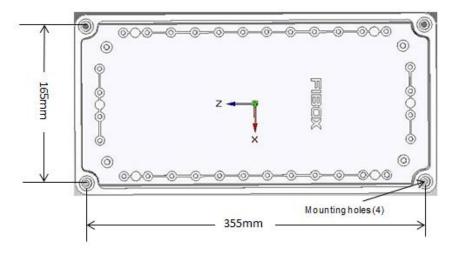

Rated Emergency Lumen Output in accordance with AS2293.1 (refer to spacing tables for installation positions):

 $\mbox{N/A}$ – refer to the IES file when doing computer aided design or request spacing guidance from Clevertronics.

Warranty:

The manufacturer warrants the goods against defects solely due to faulty parts or workmanship of the manufacturer for a period of 24 months from the date of purchase. This warranty covers the repair or replacement of the goods at the discretion of the manufacturer, upon the goods being returned to the nearest branch of the manufacturer at the clients cost. Any other warranty or guarantee, expressed or implied, to the extent permitted by law, is expressly excluded. The manufacturer shall not be liable for any costs or consequential losses that may arise through the use of any of the manufacturers' products. Installation or operation of this product in a manner NOT complying with this instruction leaflet will automatically void any and all warranties.