


THIS PAGE IS INTENTIONALLY LEFT BLANK



IP65 CIRCULAR PRO LED Luminaire
Installation & Maintenance Instruction Leaflet

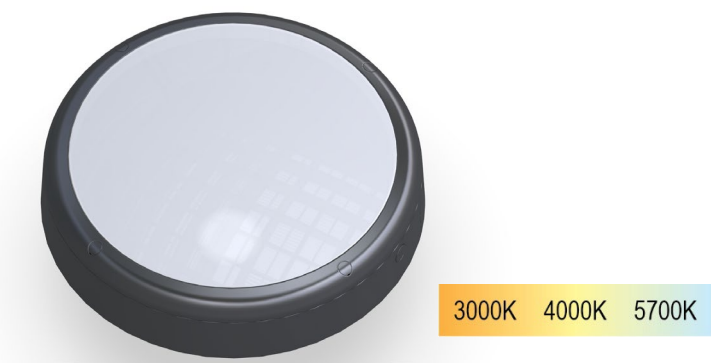

Australia (Head Office)
Website: www.clevertronics.com.au
Email: info@clevertronics.com.au
Phone: +61 3 9559 2700

UK OFFICE
Website: www.clevertronics.co.uk
Email: sales@clevertronics.co.uk
Phone: 01895 430 255

Models: ARGOCIRCPRO-xx-yy

Options:		Colour:	
Without Sensor	xx = blank	Black	yy = BLK
Microwave Sensor	xx = SEN	White	yy = WHT
DALI Driver	xx = DD		

Spare Parts:

805-00004	Replacement LED Board
1330053	Replacement Mains Driver
1330104	Replacement Mains Driver (-SEN)


Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant British Standards.


Installation:

This product is a surface ceiling or wall mount fitting. Please follow below image and steps to install:

- Remove the x4 fastener plugs and x4 fastener screws to release retaining ring and diffuser.
- Release the LED board by twisting the butterfly lock, then flip and slide forward the LED board to access the base.
- Drill cable entry hole and mounting holes at base.
- Position the circular light to desired location and mark out the fixing points on the mounting surface.
- Route power supply cables through entry hole and fasten the circular light to the surface.
- Connect supply cable to the terminal according to the marked designation (N, L, E)
- Seal Cable entry and Mounting holes appropriately to maintain the IP Rating stated on the Technical Label
- Restore the LED board position by slide and flip to close, slot the butterfly lock through the keyhole and twist it to secure the board.
- Set the LED CCT switch to desired colour (3000K / 4000K / 5700K) and reinstall the diffuser and retaining ring.

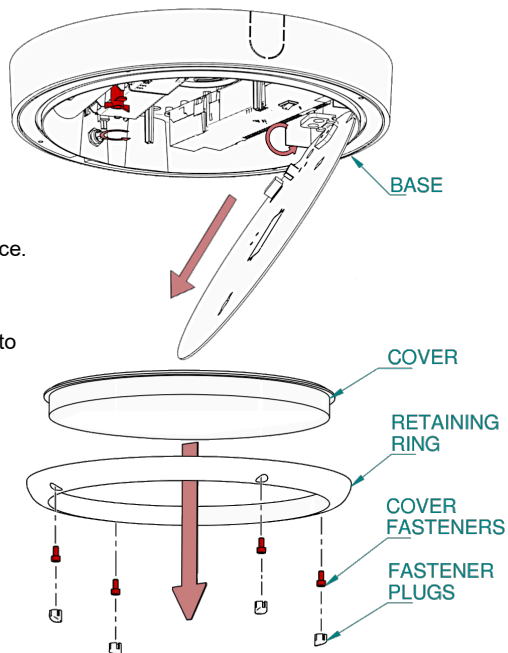

Dimensions:

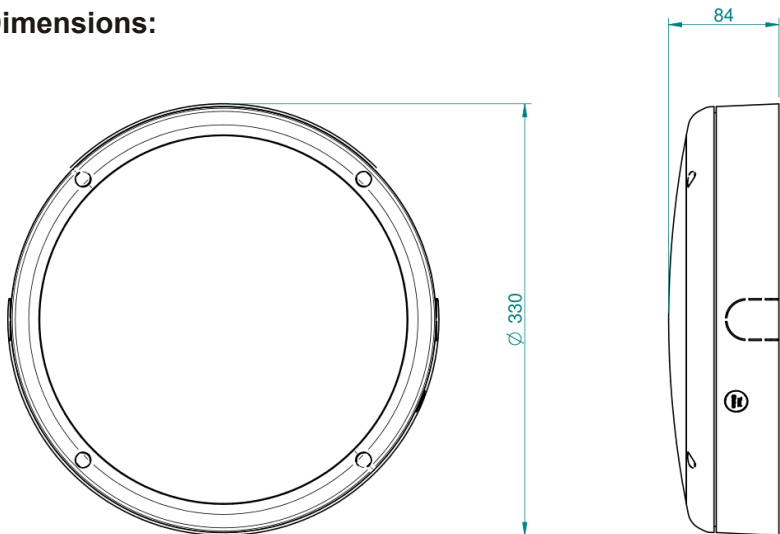

Note:

This luminaire (with reinforced insulation between control/LED terminal and AC supply) contains non-user replaceable light source - to be replaced (if required) by Clevertronics service personnel/agents or a registered electrician.

If flexible wiring is connected to this luminaire and is within arm's reach, the wiring shall be effectively fixed to the wall to reduce the risk of strangulation.

Trouble Shooting:

Below are a list of common problems and their possible causes.

Fault: The LED Panel is not illuminated.


Check: A.C. is connected and is turned on.

Wiring connections between the LED Driver & LED Panel

Microwave Sensor Option

Refer to the supplementary operation guide supplied with the Product.

– Clevertronics Stallion Driver, Sensor Adjust.

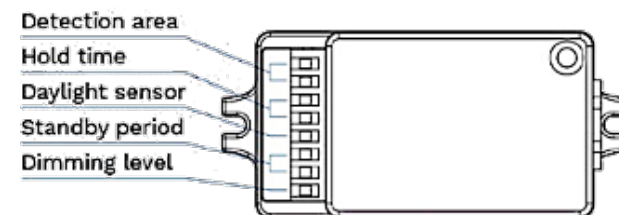

Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website

<https://clevertronics.co.uk/product-warranty-statement/>