

After Power ON, the Status LED on a Clevertest Plus enabled fitting will display a rapid Green or Red flashing for a period up to 2 minutes.

## Zoneworks and DATA Monitored Options

Supalites with part numbers -ZW and -DATA are fitted with Zoneworks communications modules (nodes). These fittings are monitored using either Powerline Carrier Technology that utilising the power cable to provide data communication or a dedicated data cable to/from data routers installed on a dedicated data trunk connected to a central Server (can also be connected via Ethernet/Internet/Fibre). Zoneworks software on the server is used to monitor, coordinate testing and collate test data from each fitting. Zoneworks Supalites can be commissioned by a single push of the test switch or scanning of the supplied barcode. The LED Test Switch indicator provides a multifunction indication of the status of the 'Supalite during testing and normal operation:

State	LED Operation
Commissioned	LED on Solid (GREEN)
Un-commissioned	LED flashes at 0.5Hz (0.5s GREEN, 0.5s Yellow)
Emergency Light Test In Progress	LED flashes at 3s On (Yellow) & 0.5s Off

In the case of the DATA version a 2-way "figure 8" cable and terminal block facilitates the connection to the DATA network via a multi-drop bus (daisy chain connection). For further information of installation of a Zoneworks system, please refer to the Zoneworks Users Guide and Commissioning Guide (incl. DATA version)

## DALI EM Option

Supalites with part numbers -DALI are fitted with DALI modules (nodes) that facilitate connection and integration to 3<sup>rd</sup> Party Lighting Control Systems. Before installing the -DALI Supalite, please confirm that the Lighting Control System has the capability to monitor DALI Emergency Luminaires. The Supalite will be addressed and configured into the control system by the Lighting Control System Commissioning Technicians and not Clevertronics.

State	LED Operation
Commissioned/ Un-commissioned	LED on Solid (GREEN)
Emergency Light Test in progress	LED flashes at 1s On (Yellow) & 1s Off
"IDENTIFY COMMAND"	Fitting goes into emergency mode for 10 seconds


A 2-way "figure 8" cable and terminal block facilitates the connection to the DALI network OR a 5/6way "structured wiring system" lead and plug facilitating the power and DALI connection. DALI connections are marked as Da Da.

# L10™ Supalite Weatherproof Emergency Luminaire With Remote Lamp Heads

## Installation & Maintenance Instruction Leaflet



Designed in Australia to comply with the requirements of AS2293.3: 2005 and AS/NZS CISPR15: 2011.

NOTE: Standard product codes with this  symbol are enabled with Clevertest Plus capability. Please refer to the operation guide supplied with the product for details.

### Victoria (Head Office & Manufacturing)

195 Chesterville Rd  
Moorabbin VIC 3189  
Phone: +61 3 9559 2700  
Fax: +61 3 9559 2799

### News South Wales

Phone: +61 2 8805 6400  
Fax: +61 2 8805 6444

### Queensland

Phone: +61 7 3442 9700  
Fax: +61 7 3442 9777

### South Australia/Northern Territory

Phone: +61 8 8301 8800  
Fax: +61 8 8351 8286

### Western Australia


Phone: +61 8 9248 3720  
Fax: +61 8 9248 3725

### New Zealand

Phone: +64 800 548 448

## Models: LWFLED-xx-2IPREM-ss-yy

### Testing:

Manual Test	xx = Blank
Zoneworks	xx = ZW
Zoneworks DATA	xx = DATA
DALI Compatible	xx = DALI
Clevertest	xx = CT (NOTE: Products supplied with the Clevertest Plus Symbol  are activated with Clevertest PLUS capability. Please refer to the operation guide supplied with the product for details).

### Options:

Custom Option	ss
Black	yy = BLK

## Spare Parts:

1530260	BATT: L10 6.6V 2500mAh.200mm lead.SBS.
1100550	WP Led Head, c/w Led's & Loom
LCPLED-WP-18V500C-CKIT	LED Power Pack, 18V 500mA, IP Loom, L10

## Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.

## Installation:

The L10 Weatherproof Supalite (LWFLED-IPREM) is Surface Mounted. The Control gear and Lamp Heads are housed in weather proof enclosures. The enclosures are attached to the wall using screws installed through the 4 isolated holes. Please follow the steps below to install the Weather Proof fitting.

### Control Gear

- Remove the Control Gear cover.
- Remove the gear tray.
- Determine power entry.
- Drill power access hole in the box base.
- Position the box base in the mounting position.
- Mark the 4 holes for mounting. Install the base using appropriate fixings (not supplied).
- Connect the 240VAC supply to the terminal block on the Gear Tray.
- Reinstall the gear tray.

### Remote Lamps


- Remove the enclosure cover.
- Determine cable entry point for LED cable from the Control Gear.
- Drill appropriate hole and install an appropriate cable gland.
- Position the box and mark out the mounting holes. Install the box using appropriate fixings.
- Route and connect the LED drive cables from the Control Gear (LED+, LED-) using appropriate weatherproof glands between the Control Gear and the Lamp Heads to maintain the IP65 rating.

If the CTP capabilities are activated, please affix the CTP status Label to a visible surface

## Networking:

When installing the product on a monitored network, (ZONWORKS, DATA, DALI) simply insert the relevant Smart Node PCA.

## Images and Dimensions:

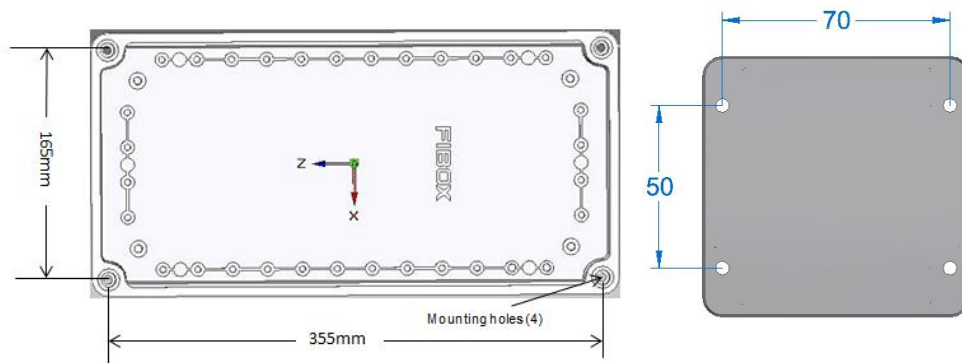

## Testing:

When the Supalite unit is connected to the un-switched active, it must be allowed to charge the battery for at least 24 hours. The emergency lamp only illuminates during a power fail. Conduct the following tests:

- The emergency lamps must illuminate for at least 2 hours after disconnection from the mains. The results of all tests are required to be recorded in a service logbook, which is to be kept on-site at all times. If the unit fails to illuminate for the requisite time, remedial action must be taken to repair the situation and once completed, the unit must pass a subsequent test.
- Press and hold Test Button or switch Off Mains Supply, check that the emergency lamps are On.
- Release the Test Button or Switch On Mains Supply, check that the emergency lamps are Off (Non-maintained operation).

## Below are a list of common problems and their possible causes:

**Fault:** The Green LED indicator is not illuminated.

**Check:** A.C. is connected and is turned on.  
Battery is connected.  
Test Switch for damage.

**Fault:** Lamp does not illuminate in emergency mode.

**Check:** A.C. is connected.  
Lamp is correctly inserted.  
Battery is connected

**Fault:** Lamp illuminates in emergency mode, but only stays on for a short period.

**Check:** Battery has been allowed to charge for at least 24 hours.  
Battery for damage.

## Rated Emergency Lumen Output in accordance with AS2293.1 (refer to spacing tables for installation positions):

N/A – refer to the IES file when doing computer aided design or request spacing guidance from Clevertronics.

## Caution:

On many building sites, power circuits may be cut off in an uncontrolled and repetitive basis during construction. As a result, any Supalite Units on these circuits, will have their batteries discharged or "cycled". The battery in the Supalite has been selected to give excellent long-life performance in a controlled IEC 60598-2-22 testing environment. Excessive battery cycling will reduce through-life performance and may lead to premature battery failure. Battery warranty claims, as a result of such abuse, are specifically EXCLUDED from Clevertronics warranty terms.

## Warranty:

For Product Warranty information and Terms and Conditions of Sales please refer to our website <http://clevertronics.com.au/terms-conditions-sale-australia-nz/>