

Refer to the supplementary operation guide supplied with the Product.  
After Power ON, the Status LED on a Clevertest Plus enabled fitting will display a rapid Green or Red flashing for a period up to 2 minutes.

The front cover will require removal to gain access to the Test/Status Switch and LED.

**Zoneworks, HIVE (HV/HVG) and DATA Monitored Options**

Fittings with part numbers -ZW, -HV, -HVG, -DATA are fitted with Zoneworks communications modules (nodes). These fittings are monitored using either Powerline Carrier Technology that utilize the power cable to provide data communication, RF transceiver modules operating in the ISM band or a dedicated data cable to/from data routers installed on a dedicated data trunk connected to a central Server (can also be connected via Ethernet/Internet/Fibre). Zoneworks software on the server is used to monitor, coordinate testing and collate test data from each fitting. Zoneworks Fittings can be commissioned by a single push of the test switch or by scanning the supplied barcode. The LED Test Switch indicator provides a multifunction indication of the status of the fitting during testing and normal operation:

Option	State	LED Operation
ZW, HV, HVG, DATA	Commissioned	LED on Solid (Green)
ZW, DATA	Un-commissioned	<b>Batt plugged-in:</b> yellow 1s, green 1s
		<b>Batt unplugged:</b> red 1s, off 1s
HV, HVG	Un-commissioned With network connectivity	<b>Batt plugged-in:</b> yellow 1s, green 1s
		<b>Batt unplugged:</b> red 1s, off 1s
HV, HVG	Un-commissioned Without network connectivity	<b>Batt plugged-in:</b> yellow 250mS, green 250mS, yellow 250mS, green 250mS, green 1s
		<b>Batt unplugged:</b> red 250mS, off 250mS, red 250mS, off 250mS, off 1s
ZW, DATA	Emergency Light Test In Progress	LED flashes at yellow 5s , Off 1s
HV, HVG	Emergency Light Test In Progress	LED flashes at yellow 1s , Off 1s

In the case of the DATA version a 2-way “figure 8” cable and terminal block facilitates the connection to the DATA network via a multi-drop bus (daisy chain connection). For further information of installation of a Zoneworks system, please refer to the Zoneworks Users Guide and Commissioning Guide (incl. DATA version)

**DALI EM Option**

Luminaires with part numbers having -DALI are fitted with DALI modules (nodes) that facilitate connection and integration to 3<sup>rd</sup> Party Lighting Control Systems. Before installing the -DALI luminaire, please confirm that the Lighting Control System has the capability to monitor DALI Emergency Luminaires. The -DALI fitting will be addressed and configured into the control system by the Lighting Control System Commissioning Technicians and not Clevertronics.

State	LED Operation
Commissioned/ Un-commissioned	LED on Solid (Green)
Emergency Light Test in progress	LED flashes at 1s On (Yellow) & 1s Off
“IDENTIFY COMMAND”	Lamp and Status LED Flash for 30 seconds

A 2-way “figure 8” cable and terminal block facilitates the connection to the DALI network. DALI connections are marked as Da Da.

**Caution:**

On many building sites, power circuits may be cut off in an uncontrolled and repetitive basis during construction. As a result, any Exit & Emergency Units, on these circuits, will have their batteries discharged or “cycled”. The battery in this fitting has been selected to give excellent long-life performance in a controlled AS2293 testing environment. Excessive battery cycling will reduce through-life performance and may lead to premature battery failure. Battery warranty claims, as a result of such abuse, are specifically EXCLUDED from Clevertronics warranty terms.



**L10™ Weatherproof Recessed LED Exit with Weatherproof Remote-Controlled Gear Installation & Maintenance Instruction Leaflet**



**Victoria (Head Office & Manufacturing)**  
Website: [www.clevertronics.com.au](http://www.clevertronics.com.au)  
Email: [info@clevertronics.com.au](mailto:info@clevertronics.com.au)  
Phone: +61 3 9559 2700  
Fax: +61 3 9559 2799

**New South Wales**  
Phone: +61 2 8805 6400  
Fax: +61 2 8805 6444

**Queensland**  
Phone: +61 7 3442 9700  
Fax: +61 7 3442 9777

**South Australia/Northern Territory**  
Phone: +61 8 8301 8800  
Fax: +61 8 8351 8286

**Western Australia**  
Phone: +61 8 9207 0000  
Fax: +61 8 9207 0088

**New Zealand**  
Phone: +64 800 548 448

Designed in Australia to comply with the requirements of AS2293.3: 2005 and AS/NZS CISPR15: 2017

NOTE: Standard product codes with this symbol  are enabled with Clevertest Plus capability. Please refer to the operation guide supplied with the product for details.

**Models:**

**LWELED-ww-xx-REC-WM-IPREM-uu-vv-zz-ss**

**Testing:**

Manual Test xx = Blank  
Zoneworks xx = ZW  
Z/W DATA xx = DATA  
Zoneworks HIVE xx = HV/HVG  
DALI Registered. xx = DALI



**Options:**

Tamper Proof uu = TP  
Special Decal ss=SP  
4 Hour Runtime yy = 4HR  
Theatre ww = TH  
Tamperproof uu = TP  
Black zz = BLK

**Spare Parts:**

1530030 Replacement Battery  
8002120 Replacement Emergency LED Board  
AUM01370350001 Replacement Emergency Driver  
AUM01970070001 Replacement Emergency Driver (-HVG)  
AUM01270380002 Replacement Emergency Driver (-DALI)  
AUM01870300001 Replacement Emergency Driver (-HV)  
AUM01370420001 Replacement Emergency Driver (-FZR)  
AUM01870860001 Replacement Emergency Driver (-HVEXTA)

**Important:**

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.

**Warranty:**

For Product Warranty information and Terms and Conditions of Sales please refer to our website <http://clevertronics.com.au/terms-conditions-sale-australia-nz/>

## Installation:

The L10 Weatherproof (WP) LED Exit is a 2-part assembly. The LED light source and EXIT decal is housed in a separate recessed WP enclosure to the WP control gear enclosure. The EXIT enclosure is suitable for temperature environments of -40°C to +40°C. The remote-control gear enclosure is suitable for temperatures of 0°C to +40°C. The enclosure base is attached to the Ceiling/wall using screws installed through the 4 isolated holes. The remote-control gear enclosure is connected to the EXIT enclosure via a 2-core cable to be supplied by the installer (not supplied by Clevertronics with the product). To install the 2-part assembly follow these steps.

### Remote Control Gear:

1. Remove the enclosure cover (4 plastic screws at each corner).
2. Remove the gear tray (4 screws holding the gear tray onto 4 mounting posts).
3. Determine power entry hole (typically the back) and separately the hole for the 2-core cable (end/side) to the EXIT enclosure. Drill the two holes.
4. Position the box base in the mounting position.
5. Mark the 4 holes for mounting. Install the base using appropriate fixings (not supplied).
6. Connect the 240VAC supply to the terminal block labelled L, N, E and ensure that holes are sealed using an appropriate cable gland to maintain IP rating.

Reinstall the gear tray and reinstall the enclosure cover.

### EXIT Enclosure:

7. Remove the fitting tamper proof trim/cover plate.
8. Remove Cover Screws to remove the Enclosure Cover, Diffuser & Decal followed by the Gear Tray
9. Determine the cable entry point for the 2-core cable that will come from the remote-control gear.
10. Drill the 2-core cable access holes in the metal housing and Weatherproof EXIT enclosure.
11. Position the metal housing in the recess and secure as required (see images below) while routing cables through access.

12. Take care to position the housing so that when the enclosure is installed, the front lip of the recessed metal housing is 1mm behind the wall face/surface.
13. Install the enclosure base to the housing while routing cables through the access. Ensure that holes are sealed using appropriate cable gland to maintain IP rating.
14. Reinstall the Gear Tray, Enclosure Cover, Diffuser & Decal 2 core cable connection between the 2 enclosures:
15. During the installation of each component the installer should consider installing the interconnecting cable between the two components. This will avoid the need to re-visit each enclosure and opening the covers and remove the gear trays a second time.
16. The 2-core interconnecting cable should use a conductor size of 1.5mm<sup>2</sup> to a maximum distance of 2m. For lengths greater than 2m, a 2.5mm<sup>2</sup> conductor should be used and the cable should be fire rated to class WS4X up to a distance of 10m. Please contact Clevertronics for advice on cable lengths and cable size beyond 10m.
17. Terminate the cable at each end (each enclosure)

If the CTP capabilities are activated, please affix the CTP status label to a visible surface and Four Segment Marking on the product will include an "F" in third segment block.

## Decal Replacement:



**NOTE:** Once Decals have been replaced, repeat 'Decal Replacement' steps in the reverse re-install the Cover, Diffuser & Decal

## Testing:

Once connected to the 240V mains supply, the unit must be allowed to charge the battery for at least 24 hours. Conduct the following tests:

- For the first test, the emergency lamp must remain illuminated for at least 2 hours after disconnection from the mains supply.
- Subsequent tests require the unit to illuminate for at least 90 minutes. The results of all tests are required to be recorded in a service logbook, which is to be kept on-site at all times. If the unit fails to remain illuminated for the requisite time, remedial action must be taken to repair the situation and once completed, the unit must pass a subsequent test. For more specific information, please refer to the current edition of the AS 2293.3 Standard.

## Maintenance:


### Lamp Replacement:

- Use only the lamp(s) recommended on the label inside the Weatherproof Exit.
- To replace the lamp bar, remove the screws, disconnect the signal cable and install the new lamp bar.

### Battery Replacement:

- Use only the battery recommended on the label inside the Exit fitting and on this instruction.
- Remove the cable ties holding the battery, unplug the lead from the PCB and remove the old battery.
- Clip the new battery into the holder, route the DC cable to the PCB and plug the new battery into the PCB.
- Secure the battery using suitable cable ties

## Dimensions:

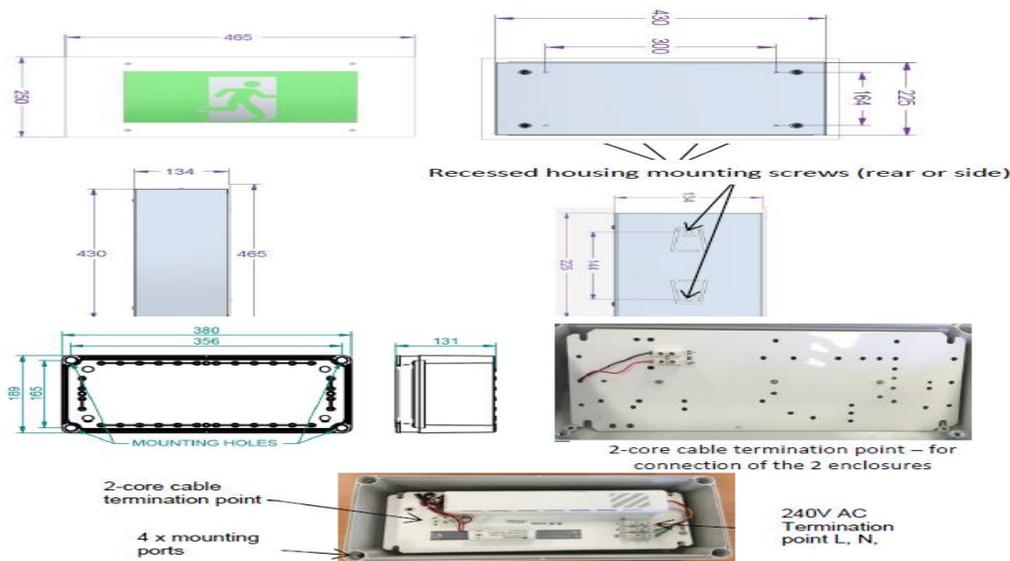

## Trouble Shooting:

Below are a list of common problems and their possible causes.

**Fault:** The Green LED Test Switch indicator is not illuminated.

**Check:** A.C. is connected and is turned on.  
Battery is connected  
Test Switch for damage.

**Fault:** Lamp does not illuminate in emergency mode.

**Check:** A.C. is connected.  
Lamp is correctly inserted.  
Battery is connected

**Fault:** Lamp illuminates in emergency mode, but only stays on for a short period.

**Check:** Battery has been allowed to charge for at least 24 hours.  
Battery for damage.

**Rated Emergency Lumen Output in accordance with AS2293.1, not applicable for -TH (theatre) version (refer to spacing tables for installation positions):**

Refer to the Technical Label for classification information.