



Create a cut-out (350mm x 48mm) in the mounting surface.

For a secure installation it is recommended to install 2 timber battens either side of the ceiling cut-out to provide maximum support for the product.

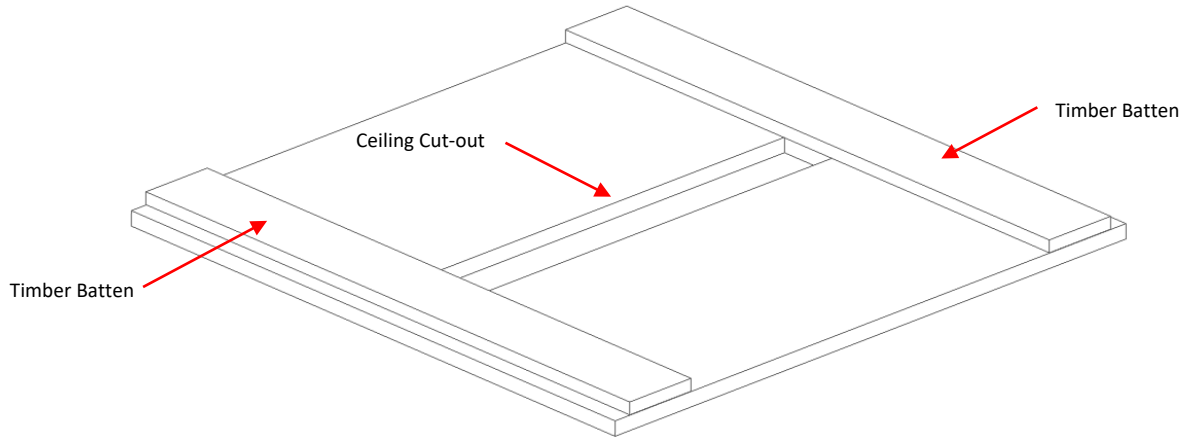


Step 1 – Insert Top Assembly into the Ceiling Tile

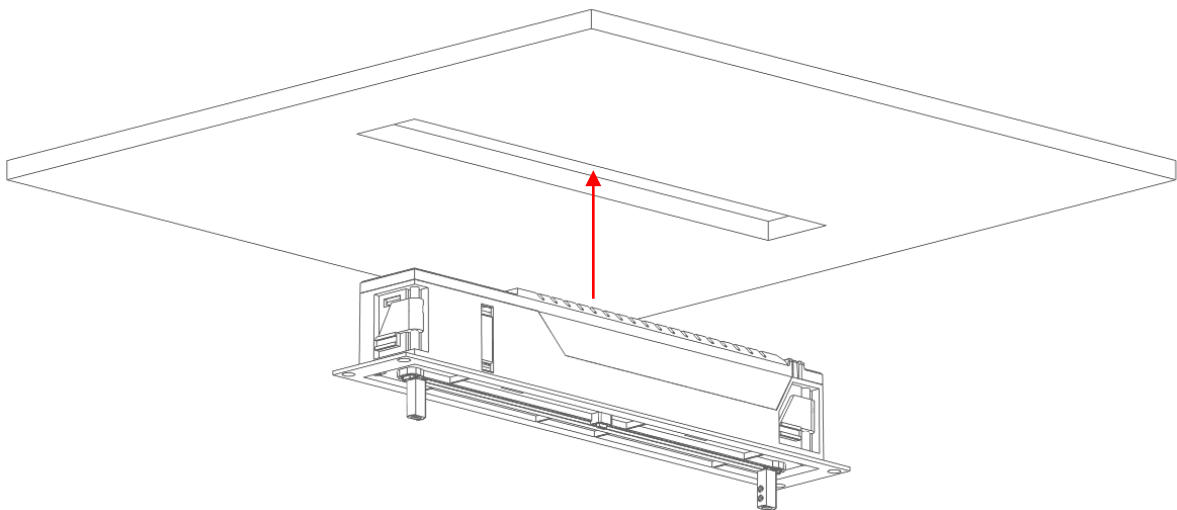


Step 2 – Rotate the 2 Paddles indicated below to retain the Top Assembly

Note: Only 2 Paddles are free the other 2 will be blocked by timber battens

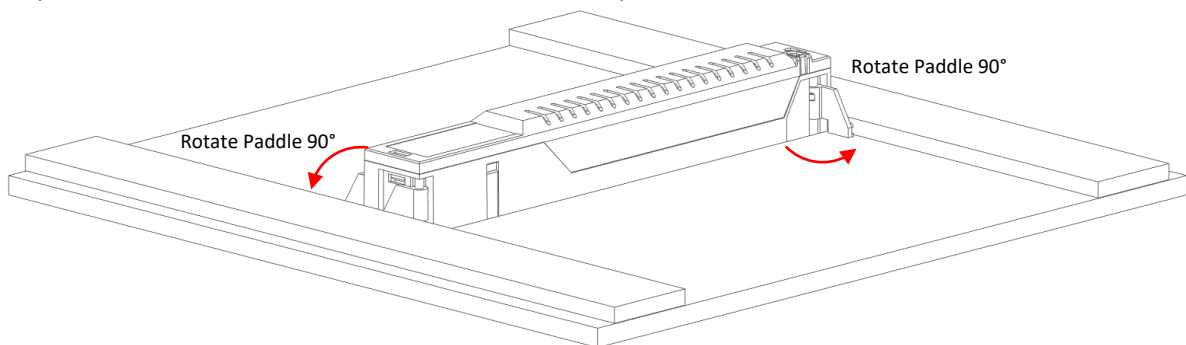

Step 3 - Fix Top Assembly to the previously installed Timber Battens using appropriate fixings and install Cover Plate

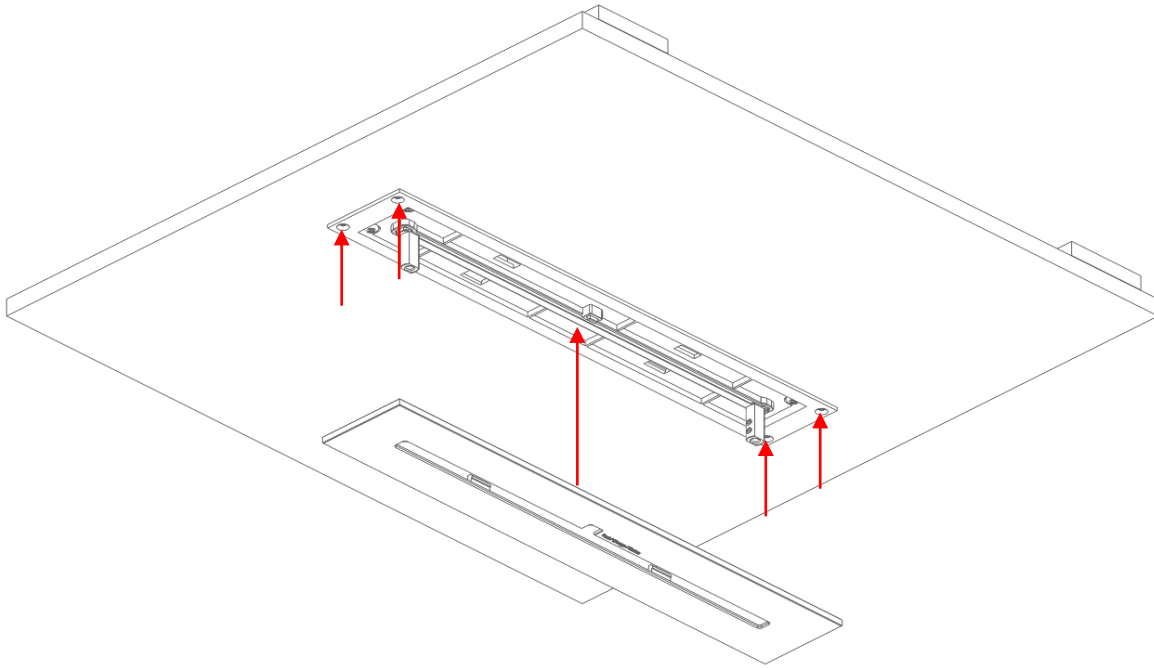

Step 4 – Cut Rods to required length (Debur cut ends and remove any coating 10-12mm from rod end to provide electrical connection) and Insert Rod & Blade Assembly and tighten all grub screws.

