
# **LP™** Weatherproof Emergency Battens

## Weather Proof Battens - Battery and LED Replacement



LED POD

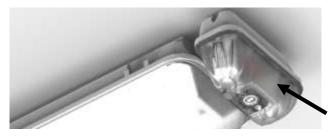

LED POD location on batten



LED POD cover removed. **Batteries highlighted** 

LED Head and Batteries LED screws highlighted

#### **SPARES**

Single LED PCB Assembly: Dual LED PCB Assembly: Battery LP 3.2V, 3.2Ah

P/N: 8002145

#### **BATTERY REPLACEMENT**

- 1. Remove the LED POD cover screws.
- P/N: 8002140 2. Remove the POD cover.
- P/N: 1550050 **3.** Disconnect battery from the interface PCB.
  - Install new batteries as required.
  - 5. Refit the Pod Cover Seal
  - Reinstall the POD cover and screws.

#### LED REPLACEMENT

- 1. Disconnect the LED cable from the LED PCB.
- 2. Remove the LED PCB screws.
- 3. Remove the heatsink and LED PCB.
- 4. Install replacement LED PCB and ensure that the seal is properly seated.
- 5. Refit the heat sink and LED PCB screws
- 6. Reinstall the LED cable
- 7. Refit the Pod Cover Seal
- 8. Reinstall the POD cover and screws

Battery and LED replacement can be performed without interrupting power to the fitting

### Important:

It is illegal for anyone, except for a licensed electrician to install or maintain this product. Before installation, ensure that the electricity supply has been switched off and isolated. Installation must be carried out in accordance with the relevant Australian and International Standards.

